



Air Blasters Tek Six Reload Slider Spring Replacement

Replace the reload slider spring in case it is no longer working properly.

Written By: Alfredo Antolinez



INTRODUCTION

The reload slider spring brings the reload slider back to the front once the blaster is ready to fire.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove screw of the grey slider



- Using a screwdriver, remove the two 11.6 mm phillips 00 screws holding the grey slider together.
- Remove grey slider from the main body of the blaster.

Step 2 — Remove screws in main body



- Using a screwdriver, remove the six 9 mm phillips 00 screws holding the main body together.

Step 3 — Take the main body apart



- Using the plastic opening tools, carefully take apart the main case of the blaster to leave the inside exposed.

Step 4 — Remove metal pin



- Carefully grab the metal pin keeping the air system and top spring, and slide it outwards. This will release the air system with the plunger completely.

Step 5 — Remove screw holding the top spring to reload slider



- Using a screwdriver, remove the 7.5 mm phillips 00 screw holding the top spring to the reload slider.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 02:30:19 AM.